

Gigaware

## Start Here

26-1430

Quick Start

### 4-Remote Recharge Station for Nintendo® Wii™

#### Package contents



Charger



Battery pack (4)



AC Adapter




User's Guide



Quick Start


### ② Place in dock

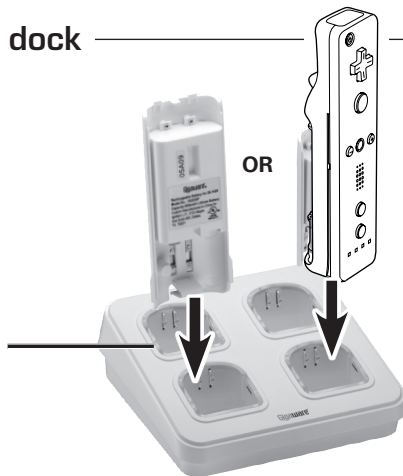

OR

The LED show red when charging.  
The LED show blue when fully charged.

### ① Replace the original battery pack

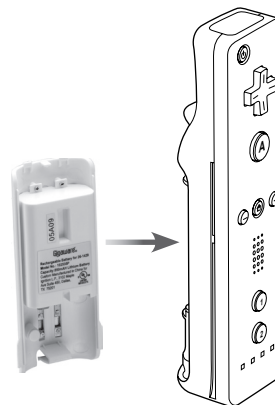

### ③ Connect power

